


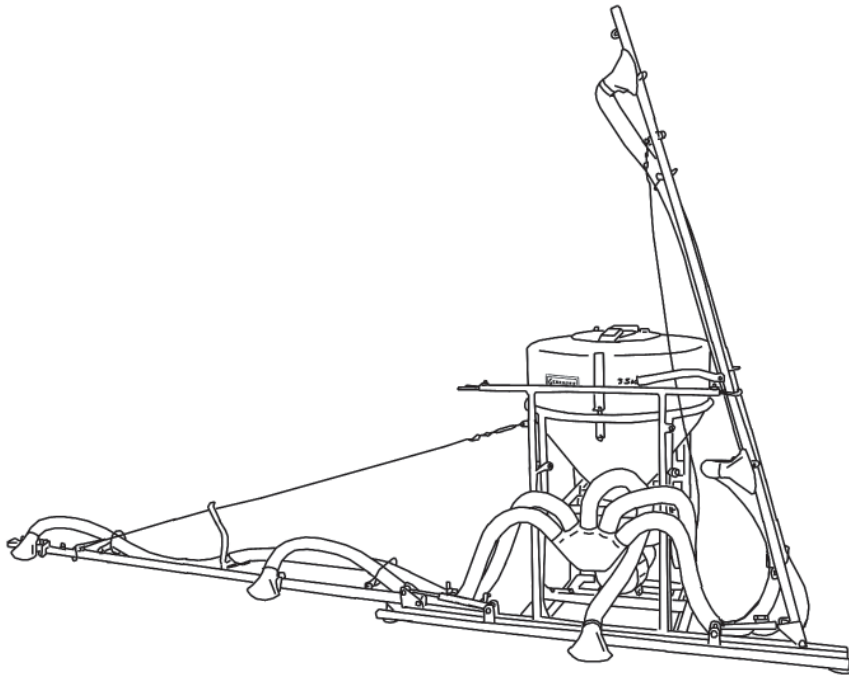

# ROW CROP SULFUR DUSTERS




## Set-up Instructions

May 2010

# SET-UP INSTRUCTIONS

**PICTURE 1**

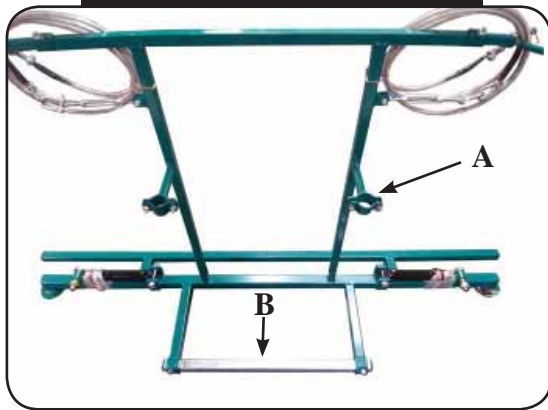


1. Remove half clamp (*Ref. A, Pict. 1*) and support tube (*Ref. B, Pict. 1*) from boom frame.

**PICTURE 2**




2. Place boom frame up against duster frame (*Pict. 2*).

**PICTURE 3**

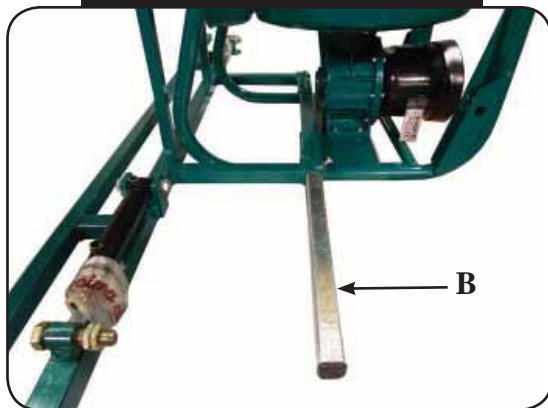

3. Align boom frame square channel to duster square channel and slide support tube (*Ref. B, Pict. 3*) through channel.

**PICTURE 4**

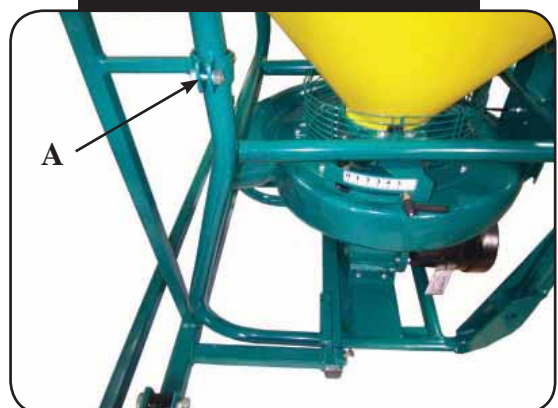


4. Mount half clamps around duster frame onto boom (*Ref. A, Pict. 4*) tighten bolts.

**PICTURE 5**



5. Mount manifold to blower housing using supplied clamp (*Ref. C, Pict. 5*).

**PICTURE 6**

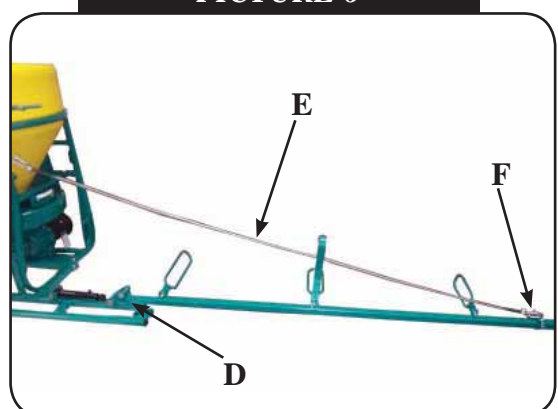

6. Mount right hand and left hand booms to boom frame with bolt and nut supplied (*Ref. D, Pict. 6*), then hook support cable (*Ref. E, Pict. 6*) to support clamp (*Ref. F, Pict. 6*).


# SET-UP INSTRUCTIONS

**PICTURE 7**




7. Pull boom up to vertical position and install rod end of cylinder to boom arms (*Ref. G, Pict. 7*) with supplied bolt.

**PICTURE 8**

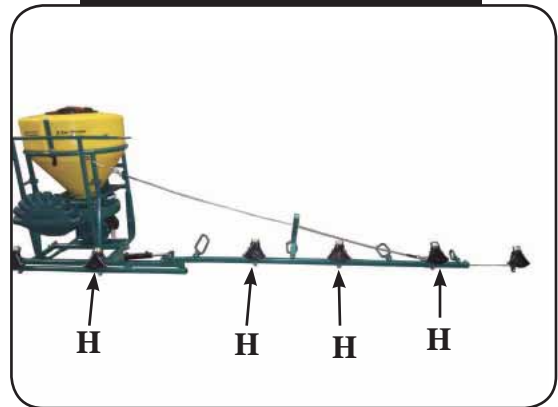

8. Mark nozzle spacing on booms and start mounting nozzle assemblies (*Ref. H, Pict. 8*).

**PICTURE 9**

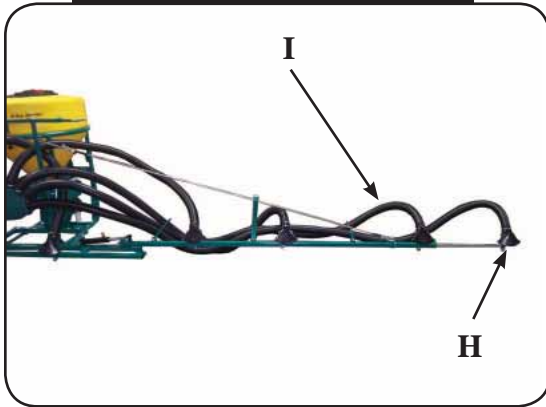

9. Measure and cut 70 mm air hose to length for each nozzle (*Ref. I, Pict. 9*) and mount to manifold (*Ref. C, Pict. 5*) and nozzle assemblies (*Ref. H, Pict. 9*) using supplied hose clamps

**PICTURE 10**



10. Mount supplied hydraulic fittings to cylinders (*Pict. 10*).