



# **ECONOMY BOX SCRAPER**

**Operation, Service  
& Parts Manual**

**For Models:**

**BB-48-C, BB-54-C, BB-60-C,  
BB-66-C, BB-72-C, & BB-84-C**

**June 2006**

# TABLE OF CONTENTS

Training & Preparation .....	1
Operational Safety .....	2
Set-Up & Servicing .....	3
Box Scraper Parts Breakdown .....	4-5
Limited Warranty .....	6

Date of Purchase: \_\_\_\_\_

Model Number: \_\_\_\_\_

Serial Number \_\_\_\_\_

# INTRODUCTION

*We welcome you as an owner of a Gearmore box scraper. Please read the following instructions and refer to them when required:*

## TRAINING

With normal maintenance you should receive years of use out of the box scraper.

1. Safety instructions are important! Read this manual, the tractor manual and all safety rules.
2. Know your controls and how to stop tractor engine quickly in an emergency.
3. Operators **must** be instructed in and be capable of the safe operation of the equipment, its attachments and all controls. **Do not** allow anyone to operate this equipment without proper instructions.
4. **Do not** allow children or unqualified persons to operate equipment

## PREPARATION

1. **Always** wear relatively tight and belted clothing to avoid entanglement in moving parts. Wear sturdy, rough-soled work shoes and protective equipment for eyes, hands, hearing and head.
2. Ensure box scraper is properly mounted, adjusted and in good operating condition.
3. Ensure all safety decals are installed and in good condition.
4. A minimum 20% of tractor and equipment weight **must** be on tractor from wheels with box scraper in transport position. Without this weight, tractor could tip over causing personal injury or death. The weight may be attained with front wheel weights, ballast in tires or front tractor weights. When attaining the minimum 20% weight on the front wheels, you **must not** exceed the Roll Over Protection Structure (ROPS) weight certification. Weight tractor and equipment. **Do not** guess or estimate.

# OPERATIONAL SAFETY

Know your controls and how to stop tractor engine and box scraper quickly in an emergency.  
***READ THIS OPERATOR'S MANUAL AND THE MANUAL PROVIDED WITH YOUR TRACTOR.***

- Keep bystanders away from equipment while it is in operation.
- Operate only in daylight or good artificial light.
- Keep hands and feet away from box scraper while tractor engine is running. Stay clear of all moving parts.
- If your tractor is equipped with a ROPS, you ***must*** wear your seat belt.
- Always*** comply with all state and local lighting and marking requirements.
- No riders*** are allowed on tractor or box scraper.
- Start engine from operator's seat after placing transmission in neutral.
- Make sure area behind your tractor is clear before operating in reverse.
- Do not*** operate on steep slopes.
- Do not*** stop, start or change directions suddenly on slopes.
- Use ***extreme*** care and reduce ground speed on slopes and rough terrain.
- Watch for hidden hazards on the terrain during operation.
- Keep alert and watch ahead as well as behind the tractor when working with the box scraper.
- Ensure equipment is properly mounted to tractor before making adjustments.
- Always*** be sure the box scraper is in the fully raised position when in transport.
- When turning close to buildings or passing through narrow areas, be sure to allow sufficient clearance for the box scraper.
- Make adjustments using hydraulic controls only when seated in operator's position.
- Set parking brake, lower equipment close to ground, turn tractor engine off and remove key before making manual adjustments. Keep yourself behind and out from underneath equipment to make adjustments. Be aware gravity forces can rotate or lower equipment and trap or pinch you.
- Stop tractor immediately upon striking an obstruction. Turn off engine, remove key, inspect and repair any damage before resuming operation.
- Block box scraper securely before working underneath.
- Lower box scraper to ground, stop engine, set parking brake and remove key before dismounting tractor.

# SERVICING INSTRUCTIONS

## MAINTENANCE SAFETY

1. Lower box scraper to ground, turn tractor engine off and remove key before performing any service or maintenance.
2. Block box scraper securely before working underneath.
3. Keep all persons away from operator control area while performing adjustments, service or maintenance.
4. Periodically tighten all bolts, nuts and screws to ensure blade is in a safe condition.
5. Ensure all safety decals are installed and in good condition.

## SET-UP INSTRUCTIONS

The scraper comes completely set-up and ready for use, except for choosing one of the three (30 scarifier shank settings:

**TOP HOLE:** Do not use the top hole in the manual shank box scraper shank. The top hole is designed for use in the mechanical shank and hydraulic shank box scrapers only.

**SECOND HOLE:** 4 1/2" deep for general purpose scarifying

**THIRD HOLE:** 2 1/2" deep for fine cutting

**FOURTH HOLE:** 1/2" deep for fine cutting.

**NOTE:** Shank can be removed completely and reversed in shank pocket when grading loose soil.

## SERVICING INSTRUCTIONS


### **CUTTING EDGE:**

For reversing the cutting edge, remove 5/8" plow bolts. Remove the cutting edge from moldboard and reinstall with the sharp edge down. Replace it when both edges are worn.

### **BOLTS:**

Keep all the bolts tight at all times by checking them periodically. Replace the bolts only with those having the same marks on the heads as on original bolt. Marks on bolt head indicate high strength.

# BOX SCRAPER PARTS DRAWING

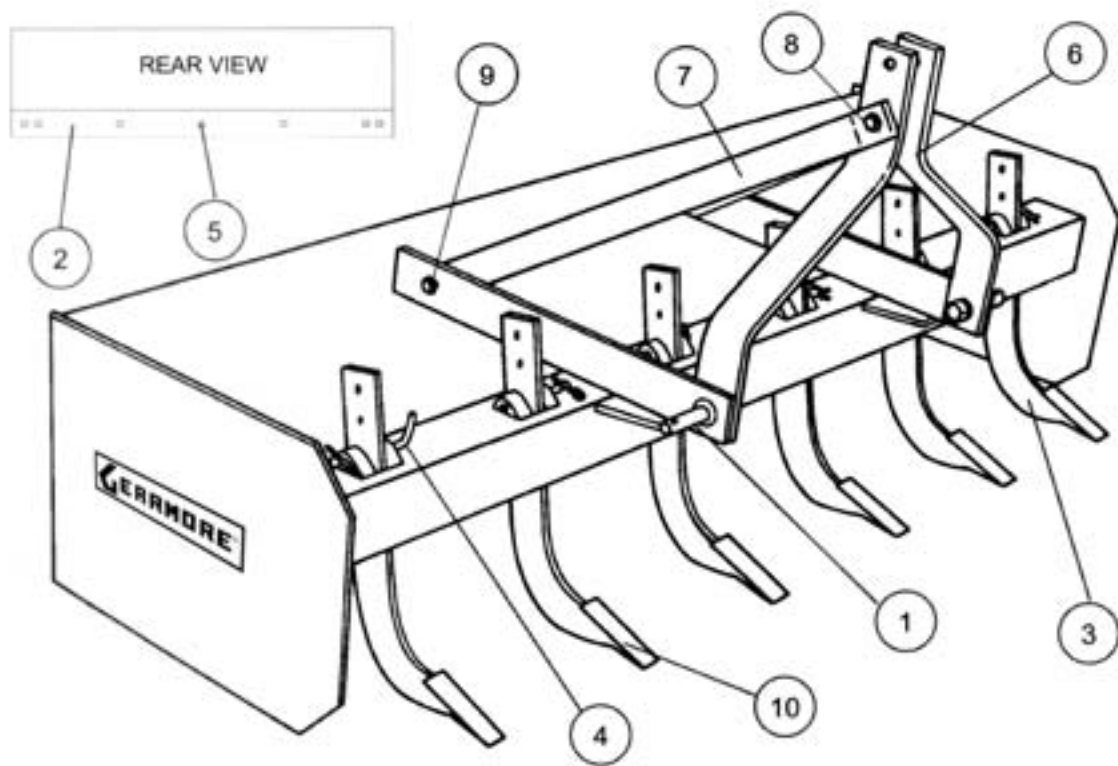

# BOX SCRAPER PARTS DRAWING

<u>REF #</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
1	500001	Cat. 1 Lift Pin (2/pk)
2	188005	48" Cutting Edge
2	188015	60" Cutting Edge
2	188020	66" Cutting Edge
2	188025	72" Cutting Edge
2	188030	84" Cutting Edge
2	188035	96" Cutting Edge
3	120001	Ripper Shank w/Tooth
4	503501	"L" Pin w/Hair Pin (4/pk)
5	503001	Cutting Edge Mounting Bolt Set (9/pk)
6	330003	Lift Arm
7	330004	Lift Arm Brace
8	501090	5/8 x 4 1/2 Lift Arm Spacer Kit
9		5/8 x 2 Bolt
10	174010	Tooth (weld on)

# LIMITED WARRANTY



GEARMORE, INC., warrants each new Gearmore product to be free from defects in material and workmanship for a period of twelve (12) months from date of purchase to the original purchaser. This warranty shall not apply to implements or parts that have been subject to misuse, negligence, accident, or that have been altered in any way.

Our obligation shall be limited to repairing or replacement of any part, provided that such part is returned within thirty (30) days from date of failure to Gearmore through the dealer from whom the purchase was made, transportation charges prepaid.

This warranty shall not be interpreted to render us liable for injury or damages of any kind or nature, direct, consequential or contingent, to person or property. This warranty does not extend to loss of crops, loss because of delay in harvesting or any other expenses, for any other reasons.

Gearmore in no way warrants engines, tires, or other trade accessories, since these items are warranted separately by these respective manufacturers.

Gearmore reserves the right to make improvements in design or changes in specification at any time, without incurring any obligations to owners or units previously sold.

GEARMORE, INC.  
13477 Benson Ave.  
Chino, CA 91710

Always refer to and heed machine operating warning decals on machine.

*The serial number of this product is stored in our computer database, thus submitting a warranty registration card is not required.*